

MAINTENANCE


Engine oil

Engine oil recommendation

Use a premium quality 4-stroke engine oil to ensure longer service life of your scooter. Only use oils that have a SJ rating above per the API service classification.

Engine oil viscosity : SAE 5W-50

If these viscosities are not available, select an alternative engine oil according to the chart shown below.

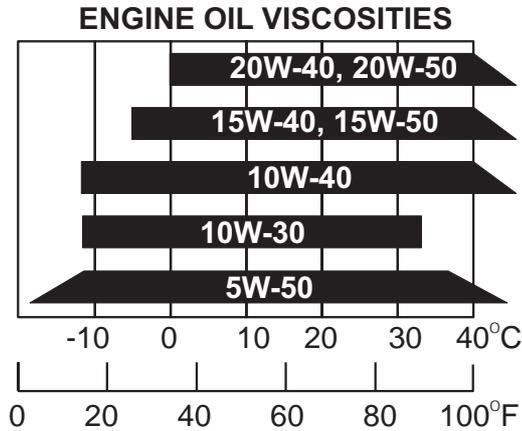

Engine oil capacity: 1.5 L

Engine oil level inspection

Check the engine oil level each day before riding your scooter. The level must be maintained between the upper ① and lower level ② marks on the oil filler cap/dipstick ③ .



1. Start the engine and let it idle for a few minutes.

⚠ CAUTION

Running the engine with insufficient oil pressure can cause serious engine damage.

2. Stop the engine and put the scooter on its center stand on level ground.