

# DOWNTOWN 300i WIRING DIAGRAM

FUSE A: 15A WINKER, FAN, STOP, BORN, METER, STARTER, POSITION, PHONE  
 FUSE B: 50A IGNITION, FAN, COIL, FUEL PUMP, ANGLE DETECTOR SENSOR  
 FUSE C: 50A FAN MOTOR  
 FUSE D: 50A CHANGING  
 FUSE E: 15A HEAD LIGHT, COLOR, TYPNG

