

CONTROLS & FEATURES

Multifunction display - Digital clock


The clock indicates the time in hours and minutes when the ignition is "ON".

To adjust the clock's time manually, follow this procedure:


1. Turn the ignition switch "ON".
2. Press and hold the ADJUST button for more than two seconds to select the ODO mode.

■ **NOTE:** The digital clock can be only adjusted in ODO mode, don't select the tripmeter or oil service meter mode if you want to adjust the time on the clock.

3. Press and hold both the Mode button and Adjust button at the same time for more than two seconds. The "hour" digits will begin flashing, indicating the clock time can be adjusted.

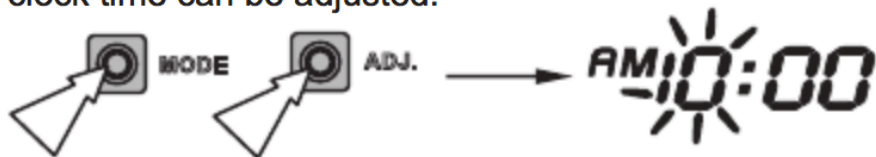


4. To set the hour display, press the ADJUST button until it displays the correct "hour" time

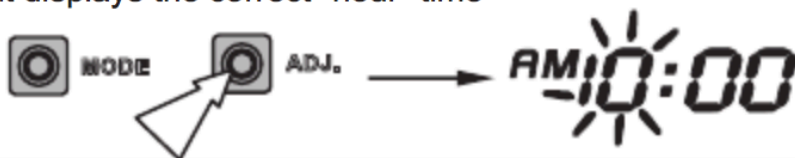

5. To change the minute display, press the MODE button until the "minute" digits begin flashing



6. To set the minute display, press the ADJUST button until it displays the correct "minute" time

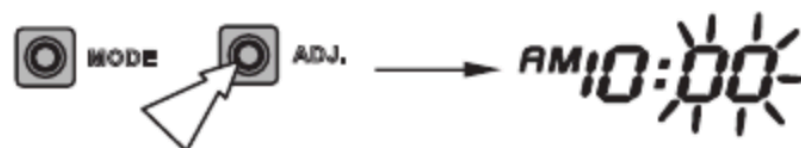

7. To end the clock adjustment, press both the MODE and ADJUST buttons at the same time. The display will stop flashing automatically. The adjustment will be cancelled if any button is not pressed within approximately ten seconds

