


2. EXHAUST MUFFLER/FRAME COVERS

RIGHT/LEFT SIDE COVER REMOVAL

Remove the screw combine right (left) side cover with front under cover.

Remove the screw combine right (left) side cover with the floor board.

Remove the right (left) side cover.

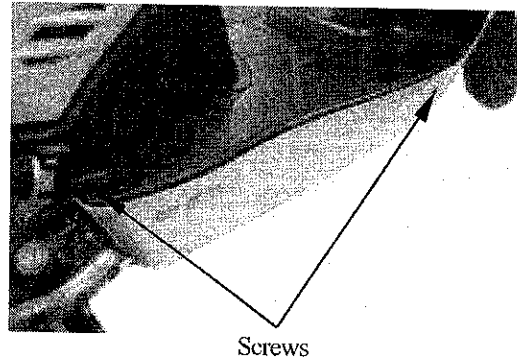

MET-IN BOX AND REAR CARRIER REMOVAL

Open the seat with key.


Remove two bolts and two nuts on the met-in box.

Disconnect all of the wire couplers.

Remove met-in box.


Remove three bolts and remove the rear carrier.

Wire Couplers

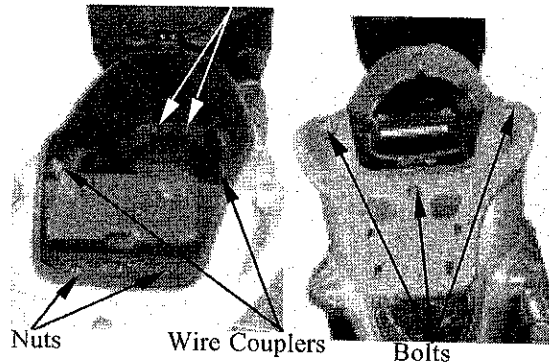

BODY COVER/CENTER COVER/REAR FENDER A REMOVAL

Remove six screws on air cleaner cover.

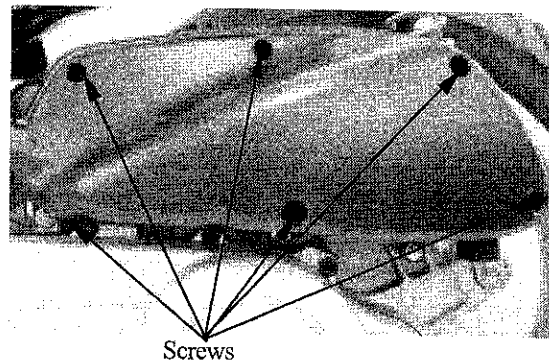


Loosen band to remove air cleaner cover and disconnect air duct hose.




2. EXHAUST MUFFLER/FRAME COVERS

Remove the met-in box and rear carrier. (⇒2-6)
Remove the four screws attaching the floor board.

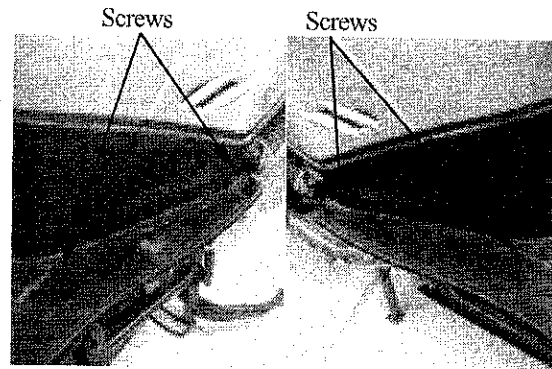


Remove the two screws on the rear fender A.

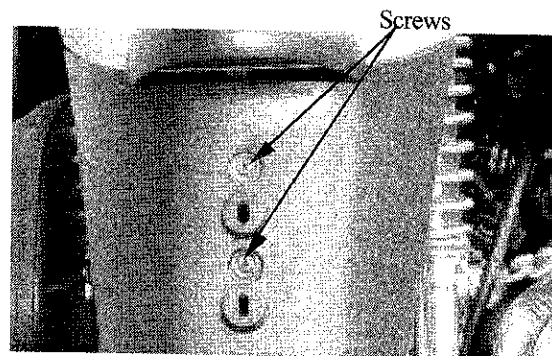

Disconnect all of the wire couplers.

Remove the body cover, center cover and rear fender A together.

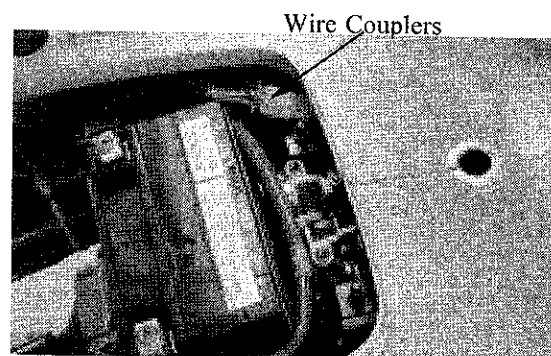

FLOOR BOARD REMOVAL

Remove the met-in box and rear carrier. (⇒2-6)
Remove the body cover, center cover and rear fender A together. (⇒2-6)
Remove right and left side cover. (⇒2-6)
Remove the four bolts on the floor board.

Remove the floor board.

